






10.3.5 Coffee module MH200

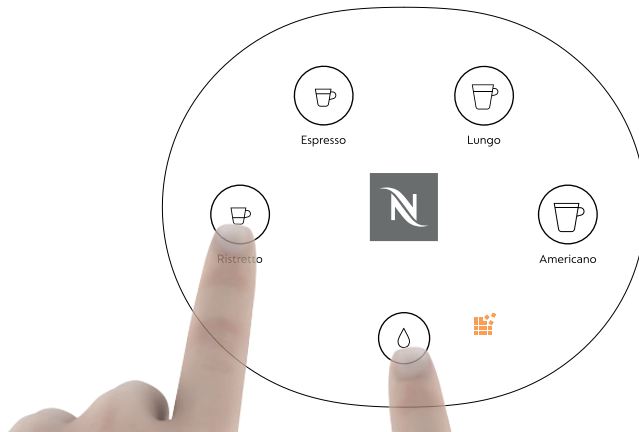


1. When the **Descal** symbol appears in orange, the machine should be descaled. Press and hold the **Ristretto** and **Hot water button** for 5 seconds to enter the menu.

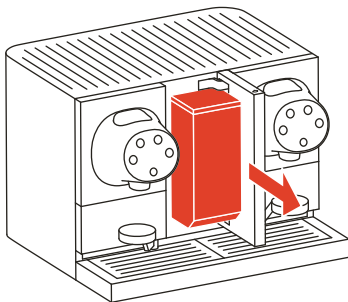


2. Remove the water tank from the machine.

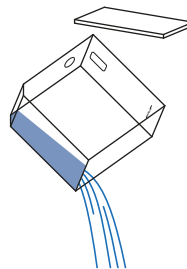


3. Empty the water tank if not already done beforehand when removing the filter.

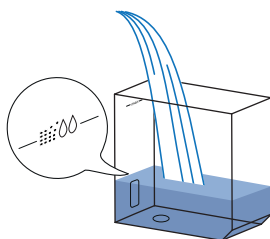


4. Fill the water tank to the descaling mark.

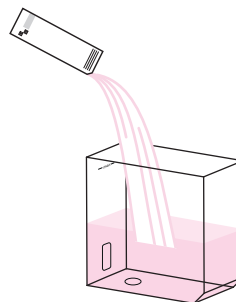

5. Add 4 bags (or 400 ml) of *Nespresso* liquid descaler.

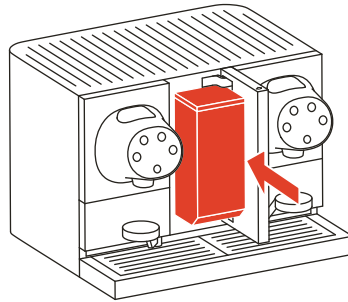


6. Attach the lid and insert the water tank back into the machine.

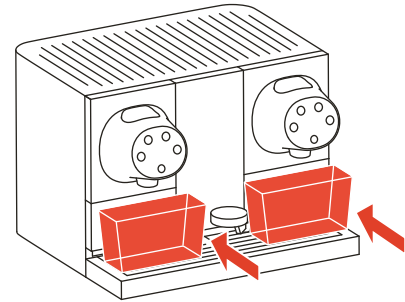


7. Place a waste water container (min. 1 l) under each outlet.




8. Press the **Ristretto button** to start descaling.

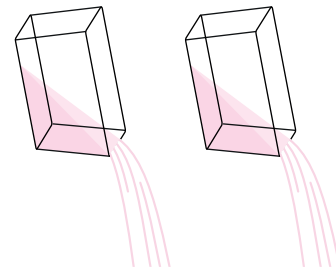


9. When the first phase is completed, remove and empty the waste water containers.

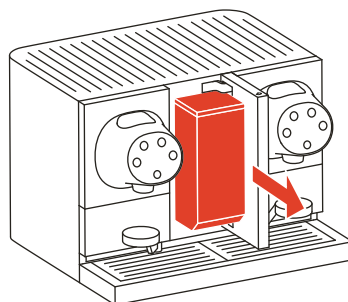


10. Remove the water tank from the machine.

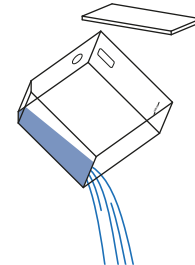


11. Empty the water tank.

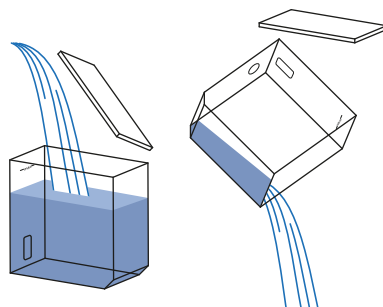


12. Rinse the water tank and empty it again.

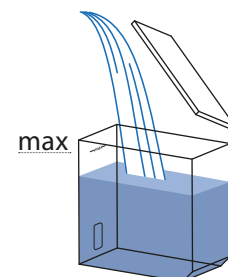

13. Fill the water tank with fresh drinking water (to the **max** line).

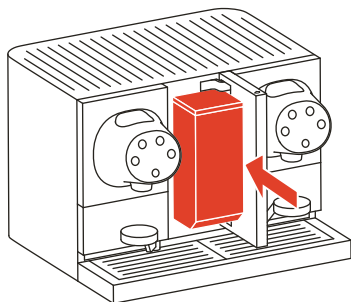

14. Attach the lid and insert the water tank back into the machine.

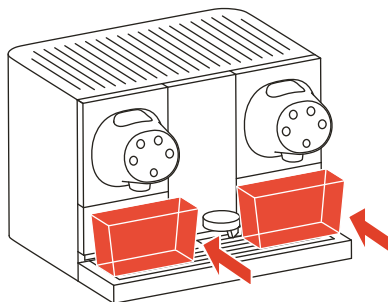


15. Place the waste water containers back under the outlets.



Americano

16. Press the **Americano button** to start rinsing.

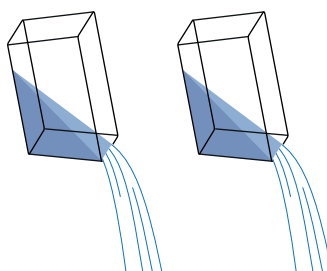

17. When the second phase is completed, remove and empty the waste water containers.