

GEMINI CS223 Descaling Instructions

1. With the machine switched **off**, on the **left coffee module**, press and hold the **Small Cup**, **Large Cup**, and **On/Off** buttons in sequence until the display shows **"Language: Greek"**.

Important: The **On/Off** button must be **solid red**, not flashing.

2. Fill the **left water tank** to **three-quarters ($\frac{3}{4}$)** with water and add the descaling solution from **four sachets**. Fill the **right water tank** to **two-fifths ($\frac{2}{5}$)** with water and add the descaling solution from **two sachets**.
3. Press the **Large Cup** button on the left side **seven times** until the display shows **"Start Descaling"**.
4. Press the **Medium Cup** button **twice** to confirm and wait until the display shows the message:

"ADD DESCALING SOLUTION – PRESS ANY BUTTON."

5. Reinstall both water tanks. Once the buttons turn **white**, press any button **except the On/Off button**.
6. The descaling cycle will begin, following this sequence:
 - Steam outlet
 - Hot water outlet
 - Both coffee outlets simultaneously
7. When the display shows **"Fill with Water"**, remove both water tanks, rinse each tank thoroughly with clean water **4–5 times**, refill them with fresh water, and reinstall them.
8. The display will then show **"Rinse – Press Any Button."** Press any button to start the rinsing cycle, which follows the same sequence as the descaling cycle.
9. When the display shows **"Exit – Press Any Button,"** press any button to exit the descaling menu.
10. Prepare **one coffee from each coffee outlet** and discard both beverages. The machine is then ready for use, and coffee can be served from the second extraction onward.