

Zenius Descaling Instructions

1. With the machine switched off, fill the water tank halfway with water and add the descaling solution from two sachets.
2. Lower the machine lever without inserting a coffee capsule.
3. Press and hold the small cup button while switching the machine on.
4. The small coffee cup button will light up solid red. Press it once.
5. The descaling cycle will begin. The machine will alternately dispense liquid through the coffee outlet and the hot water outlet.
6. Once the water tank is empty, the large coffee cup button will light up solid red.
7. Remove the water tank, rinse it thoroughly with clean water, and refill it completely with fresh water.
8. Reinstall the water tank and press the large coffee cup button once.
9. The machine will start the rinsing cycle through the hot water outlet.
10. When the large coffee cup button lights up solid red again, press it once more and wait until the water tank is completely empty.
11. Press the Hot Water button once.
12. Once the process is complete, prepare one coffee and discard it. The machine is then ready for use, and coffee can be served from the second extraction onward.

Descaling frequency:

Descaling is recommended every 6 months when using mains (tap) water, or every 3 months when using bottled water.