



10 MAINTENANCE


10.1 Clean the Milk Machine - Momento 120 (daily)

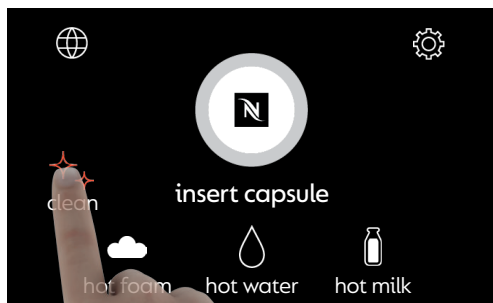


1. When the “clean” symbol appears in red, the machine should be cleaned. Tap on red “clean” symbol and follow the instructions on the screen.

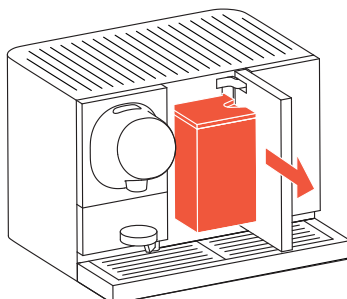


2. Swing the cup support to the side and remove, empty and clean the milk tank. Clean the milk tank in the dishwasher or use single-use paper towels or tissues with washing-up liquid.

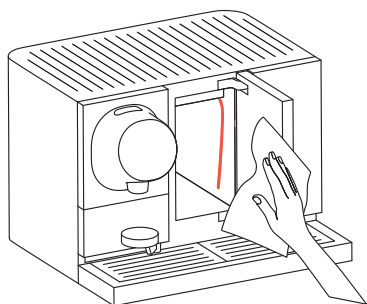


3. Clean the milk suction pipe and the milk tank bay.

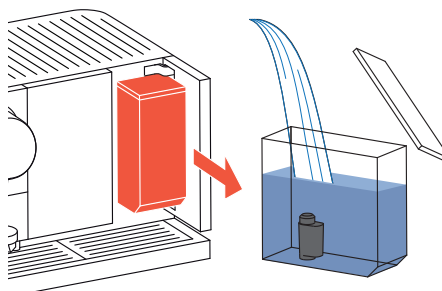

4. Remove the water tank from the machine. Fill the water tank completely with fresh drinking water.

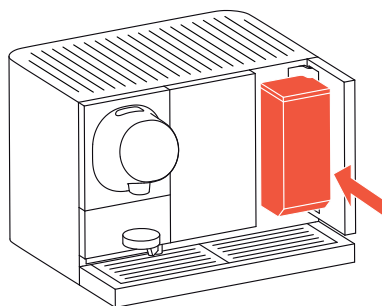

5. Insert the water tank back to the machine.

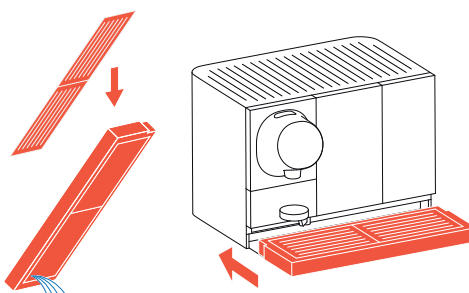


6. Remove the drip tray with the drip grid from the machine. Empty the drip tray. Wash with soapy water, rinse and dry both elements. Insert the drip tray with drip grid back to the machine.


i Alternatively, you can start the cleaning procedure by entering the maintenance menu. Select “clean the milk machine” and follow the instructions.

i In case the “clean” and “descale” symbols appear in red at the same time, proceed first to the cleaning procedure and then to the descaling procedure.

 
i Please remember to use mild odourless detergents and non-abrasive tools.




7. Place the cleaning tablet in its foreseen position in the cleaning tank. If cleaning tablet is not inserted, the cleaning procedure cannot be started.

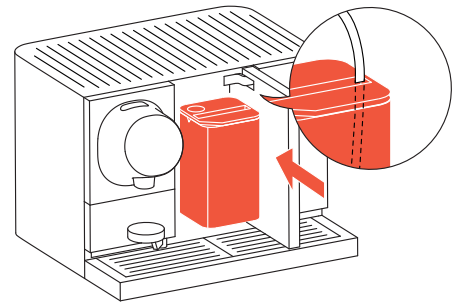


8. Insert the cleaning tank. The indentation on the cleaning tank lid must be on the front left side for correct insertion.
9. Make sure the milk suction pipe is properly placed into the cleaning tank.

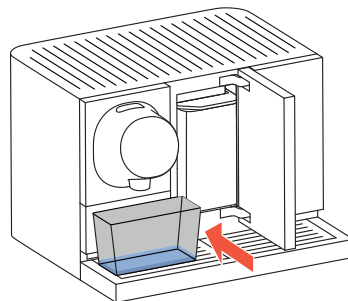


10. Place the waste water container below the outlets. **Let the fridge door open** (to avoid condensation in the milk tank bay).
11. Select ">" to launch the cleaning procedure and follow the instructions on the screen.

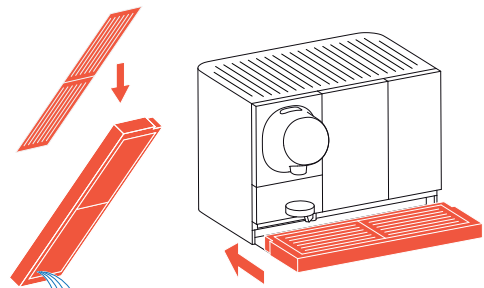

12. After the cleaning process has finished, remove the drip tray with the drip grid from the machine. Empty the drip tray. Wash with soapy water, rinse and dry both elements. Insert the drip tray with the drip grid back to the machine.

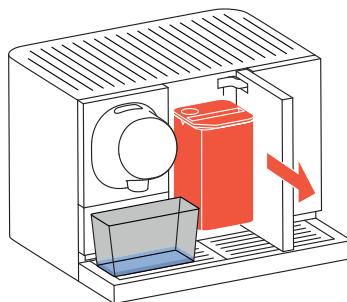

13. Remove, empty and clean the water container. Remove the cleaning tank, remove the lid, empty the tank and clean both lid and cleaning tank. Handle the cleaning tank with care as the cleaning solution is warm and composed of cleaning agent.

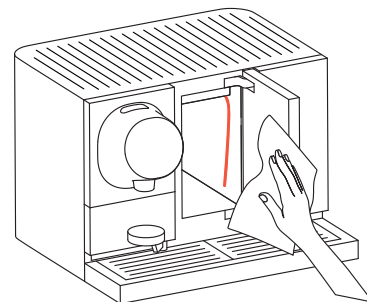


14. Clean the milk suction pipe and the milk tank bay with a single-use paper towel or tissue. Check visually that the filter on the milk suction pipe is not clogged. If it is, remove the pipe and clean it with fresh drinking water.


i If the cleaning procedure is interrupted for any reason, it has to be restarted.




15. The cleaning procedure is finished.

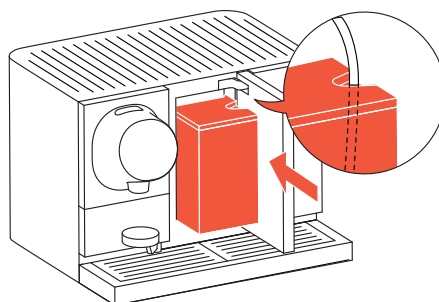


16. Refill the milk tank with refrigerated milk. Insert the milk tank back into the machine.

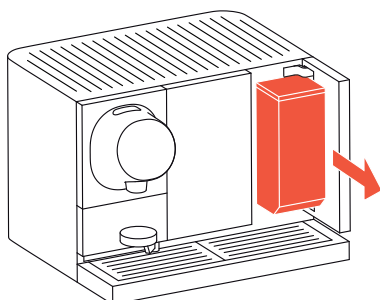


17. Remove the water tank from the machine.

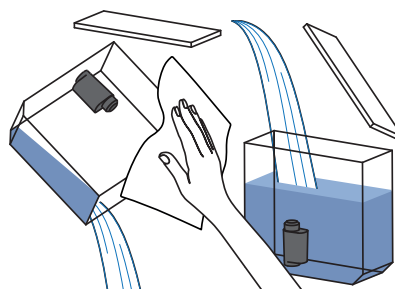


18. Remove the water tank lid. Empty, clean with a single-use paper towel or tissue and rinse with fresh drinking water. Fill the water tank with fresh drinking water and attach the lid again.

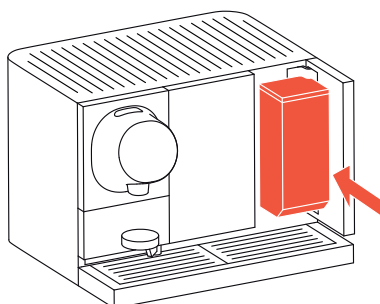


19. Insert the water tank back to the machine.

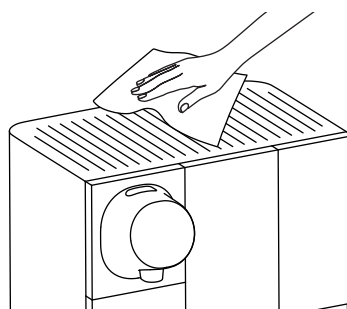

20. Clean top of the machine with a disposable tissue or paper towel. Be careful, it might be warm.

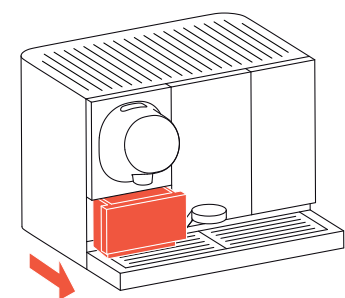


21. Swing the cup support to the side and remove the capsule container.

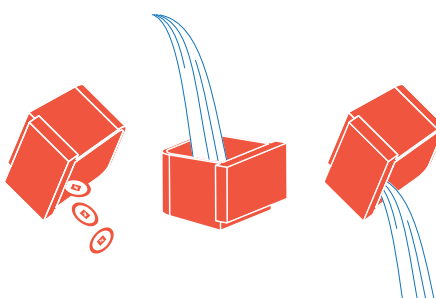


22. Empty the capsule container, wash with soapy water and dry it.


i Precooled milk (5 °C) can be refilled right after the cleaning procedure completion. The machine will take approximately 15 minutes to be ready to dispense milk recipes.

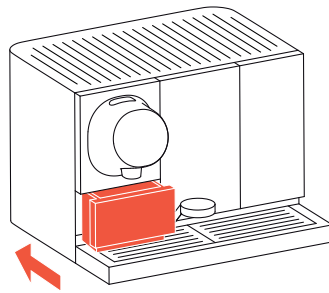


23. Insert the capsule container back into the machine.

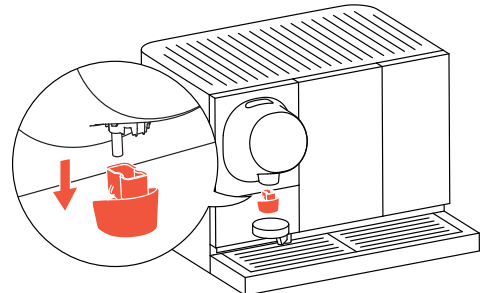


24. Remove the outlets cover. Be careful, hot water might drip.

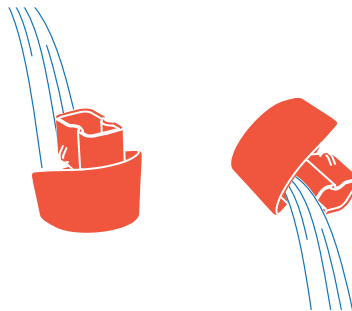

25. Rinse the outlets cover with fresh drinking water and dry it.

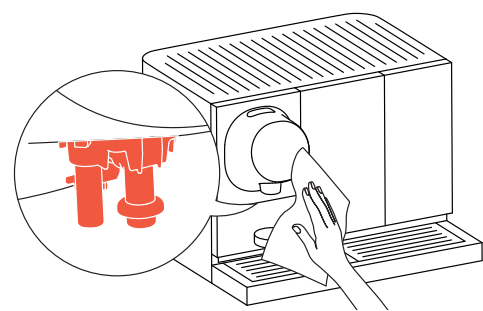

26. Clean the coffee and the milk outlets with a disposable tissue or a paper towel.

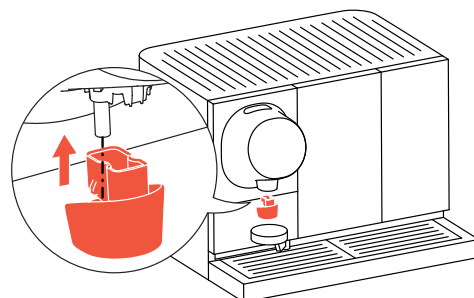

27. Insert the outlets cover back into the machine.